

Disp3000 Automated Dosing System INSTALLATION INSTRUCTIONS

NOTES

- Approximate Automated Dosing Pump dimensions: 120mm Width x 234mm Height x 132mm Depth.
- The dosing pump will reach you pre-programmed to meet your requirements.
- Batteries should last approximately 18 months under normal operating conditions.
- Additional instructions for pump mounting and connection can be found with the pump including troubleshooting suggestions.

MOUNTING



- Select a dry location close to a drain pipe that leads to the waste treatment system (e.g. under the sink is usually the most appropriate).
- Ensure there is enough room to store the relevant EcoCare product container.
- Ensure the pump mounting location is close enough to allow for tubing to reach from product container to pump and from pump to drain pipe.
- Use the screws provided to secure the pump to the wall.
- Drill a hole into the drain pipe into which the product will be dispensed via the tubing.

PUMP CONNECTION



- Drill a hole into the lid of the product container.
- Insert the short straight tubing into the hole drilled into the product container. Make sure the tubing reaches the bottom of the product container. Secure the other end of the short straight tubing to the left inlet of the pump.
- Insert the long tubing into the hole drilled into the drain pipe and secure with sealant. Attach the other end of the long tubing to the right outlet of the pump.

PRIMING



- Press the left arrow button once. Screen will display 'PRIME PUMP?'
- Press the Enter button. Screen will display 'ENTER TO START?'
- Press the Enter button. You should hear the pump activate and see liquid flow through the tubing. Screen will display 'EXIT TO STOP'.
- Once the tubes have been filled with liquid, press the Exit button to stop priming.